Operating Manual Technical Description Installation Instruction

BG3/PRO

Operating Manual Technical Description Installation Instruction






Operating Manual Technical Description Installation Instruction



Operating Manual Technical Description Installation Instruction

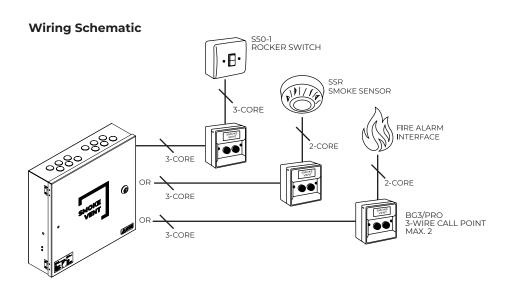


Indication

Indicator	Indication
Red LED	System is activated
Green LED	System healthy
Yellow LED	System Fault (check SCP500/800 internal indicators to locate the fault).
Green & Yellow LED	Service required
Buzzer	System is activated



Operating Manual Technical Description Installation Instruction

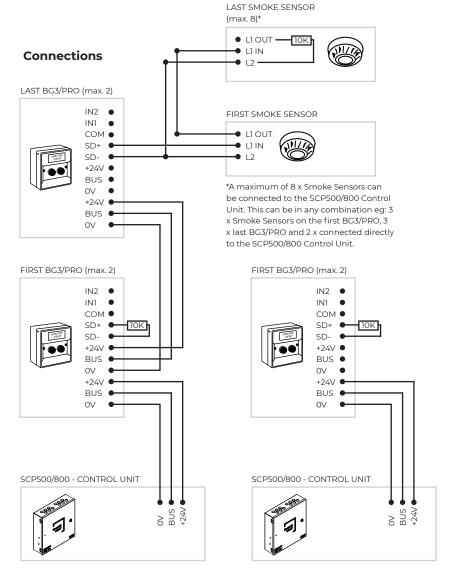


Version 2.0.1



Teal Products Ltd Unit 8A, Orchard Trading Estate, Toddington, Cheltenham, GL54 5EB, UK 01242 620318 sales@tealproducts.co.uk www.tealproducts.co.uk

Operating Manual Technical Description Installation Instruction

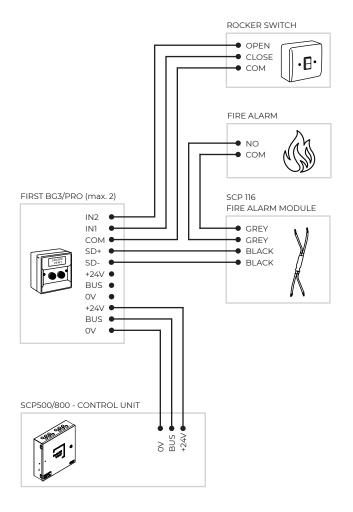

Version 2.0.1



Teal Products Ltd Unit 8A, Orchard Trading Estate, Toddington, Cheltenham, GL54 5EB, UK 01242 620318 sales@tealproducts.co.uk www.tealproducts.co.uk

Mounting

The BG3/PRO can be fitted to a standard recessed back box, or surface mounted using the included surface back box.

Commissioning

The SCP500/800 control panel is used in smoke control systems and must be checked:

- Ensure all connections are made with SCP500/800 powered off.
- Set dip switch 12 in the SCP500/800 to ON.
- · Turn mains supply on and connect batteries.
- The BG3/PRO will beep and the LED's will start flashing to confirm pairing mode.
- · Press the 'CLOSE/RESET' button on the BG3/PRO.
- The BG3/PRO will beep and the LED's will stop flashing to confirming pairing is complete.
- If two BG3/PRO are connected you must ensure the 'CLOSE/RESET' button on the second BG3/FOS is pressed within 5 minutes.

Operation

Push the 'OPEN' button to activate the system. Push the 'CLOSE/RESET' button to reset the system.



Troubleshooting

'BG ERR' Fault LED and/or BG3/PRO will not pair with SCP500/800:

- · Check your connections and cable.
- Check 10k end of line resistor is inserted in 6-wire break glass connections 4 and 6.
- Press and hold the 'FIRE' and 'RESET' buttons inside the SCP500/800 for 10 seconds then release.
- Press the SCP500/800 'RESET' button again.
- Set dip switch 12 in the SCP500/800 to OFF.
- Press the SCP500/800 'RESET' button again.
- The 'BG ERR' LED should now clear follow the Commissioning instructions to pair the BG3/PRO

If this does not resolve the problem please repeat the above process or contact your supplier for support.



HOW TO Video Guide



Operating Manual Technical Description Installation Instruction

