


VSK321A CONNECTIONS INCLUDING SMOKE DETECTOR OPTION (SVM CONTROL PANELS ONLY)

SEE SVM INSTALLATION INSTRUCTION FOR NORMAL CONNECTIONS (NO SMOKE DETECTOR)

Only connections relating to VSK321A are shown. Refer to SVM installation instruction for full connection details.

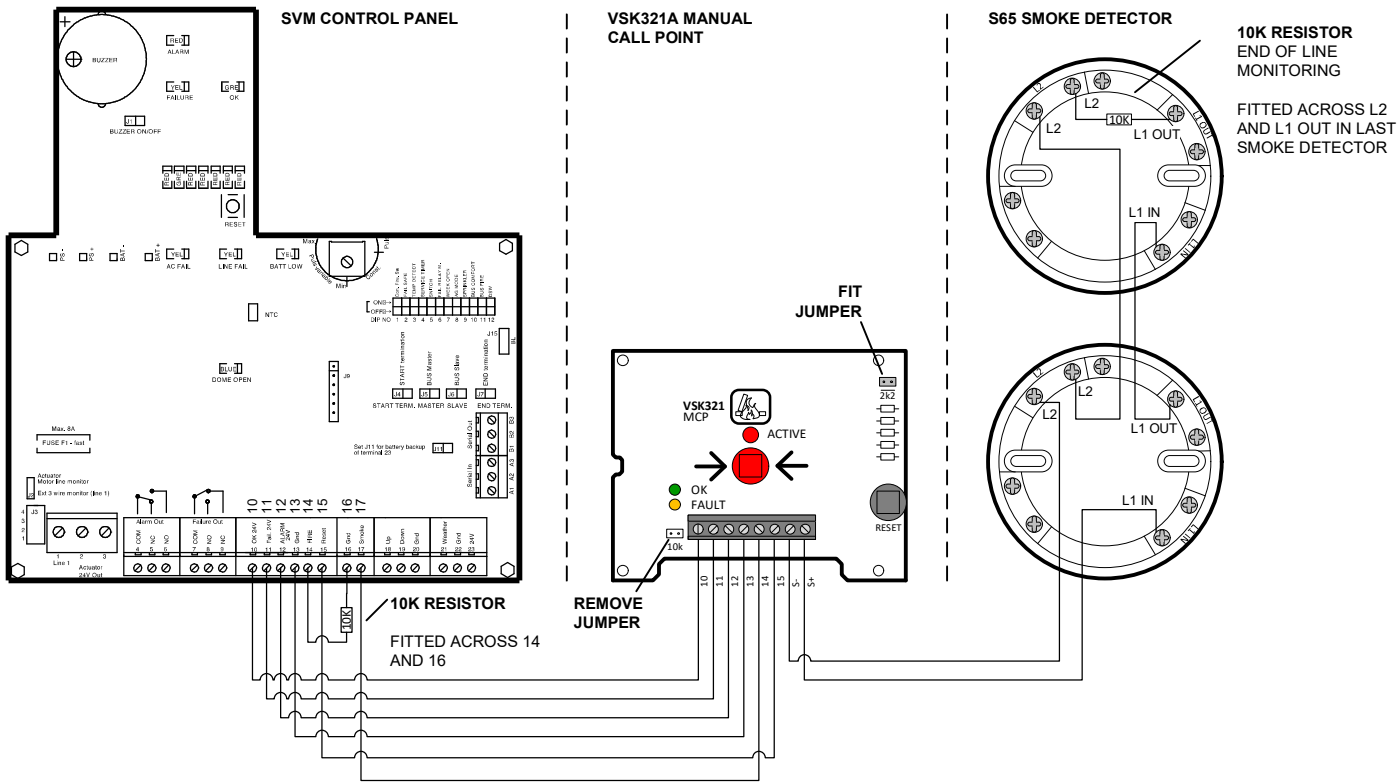


REVISION 2 20230614

VSK321A CONNECTIONS INCLUDING SMOKE DETECTOR OPTION (SVM CONTROL PANELS ONLY)

SEE SVM INSTALLATION INSTRUCTION FOR NORMAL CONNECTIONS (NO SMOKE DETECTOR)

Only connections relating to VSK321A are shown. Refer to SVM installation instruction for full connection details.

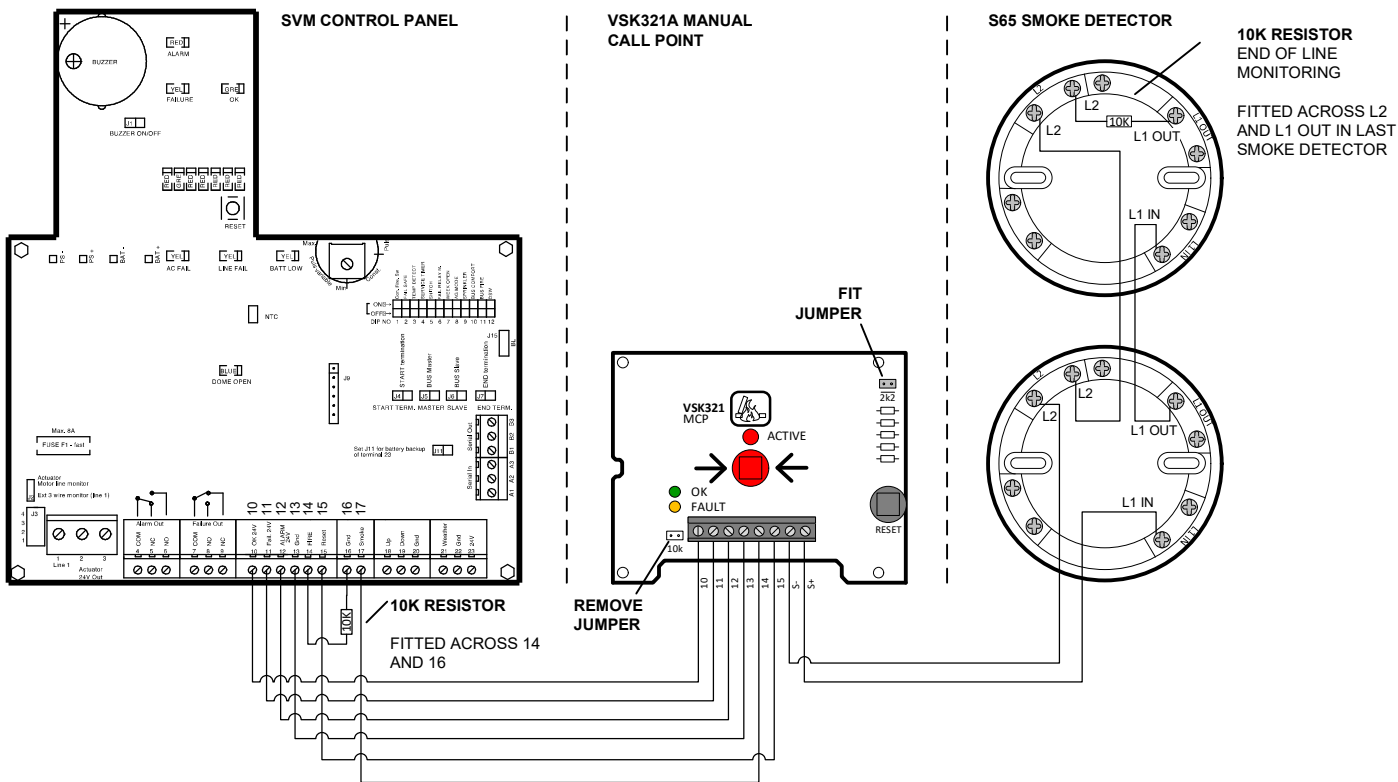


REVISION 2 20230614


VSK321A CONNECTIONS FOR CONTROL PANELS

FOR SVM24 SEE HERE, DO NOT USE CONNECTIONS IN SVM INSTRUCTIONS


D+H RZN 4402-04-K ETC

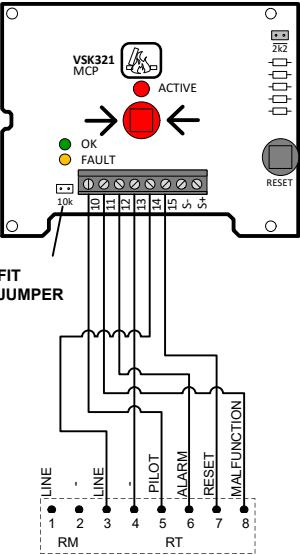


WINDOWMASTER WSC 204

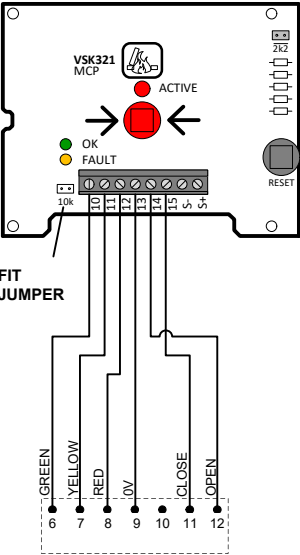


SE CONTROLS BTR (FAULT LED NOT POSSIBLE)

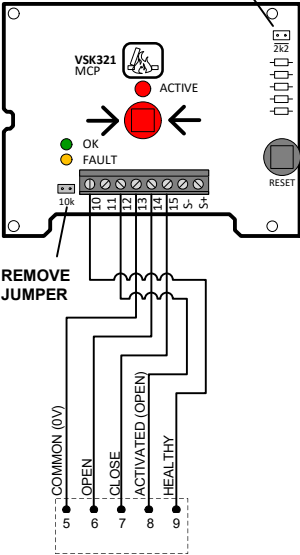

SVM24

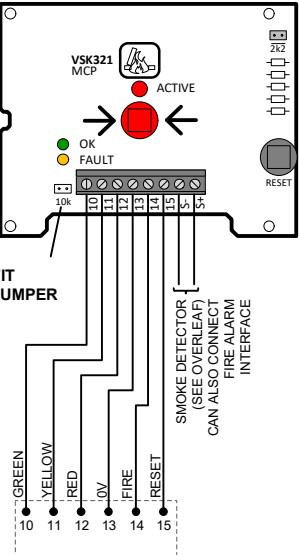

CIRCUIT DIAGRAM

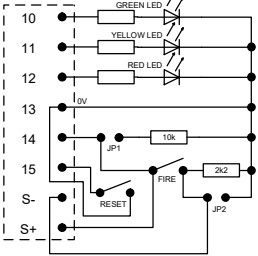

NOTE:
SVM CONNECTIONS ARE;
10 TO 10
11 TO 11
12 TO 12
13 TO 13
14 TO 14
15 TO 15

NOTE:
DEPENDING ON THE AGE OF YOUR BTR CONTROLLER, IF THE RED LIGHT IN THE MCP DOES NOT LIGHT UPON TRIGGERING THEN LINK 7 & 8 IN THE PANEL




REVISION 2 20230614


VSK321A CONNECTIONS FOR CONTROL PANELS

FOR SVM24 SEE HERE, DO NOT USE CONNECTIONS IN SVM INSTRUCTIONS


D+H RZN 4402-04-K ETC

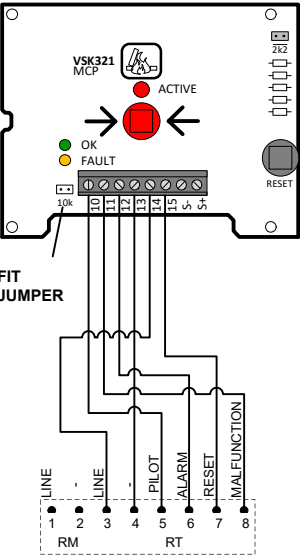


WINDOWMASTER WSC 204

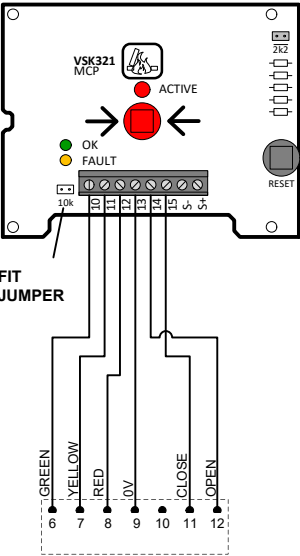


SE CONTROLS BTR (FAULT LED NOT POSSIBLE)

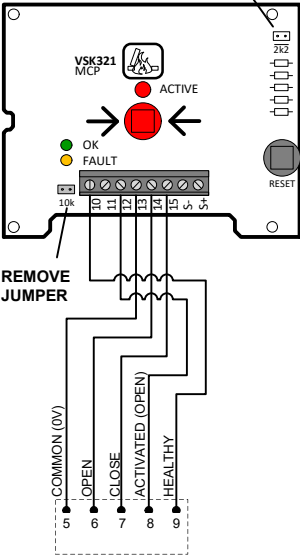

SVM24

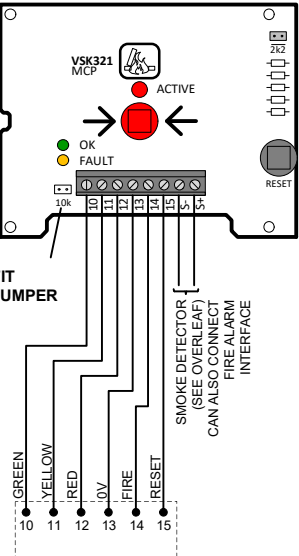

CIRCUIT DIAGRAM

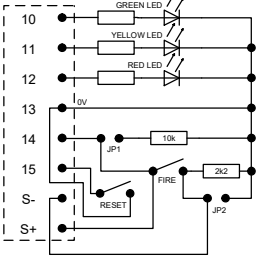

NOTE:
SVM CONNECTIONS ARE;
10 TO 10
11 TO 11
12 TO 12
13 TO 13
14 TO 14
15 TO 15

NOTE:
DEPENDING ON THE AGE OF YOUR BTR CONTROLLER, IF THE RED LIGHT IN THE MCP DOES NOT LIGHT UPON TRIGGERING THEN LINK 7 & 8 IN THE PANEL



REVISION 2 20230614